

INSTALLATION AND OPERATION INSTRUCTIONS FOR THE FULLVIEW or SUPREME DOORS

For best results this door should be installed by a professional, consult your dealer for installation.

1. The tools required for installation are a power drill, a 7/32 metal drill bit, a 7/32 masonry drill bit, a 7/16 socket with ratchet, a caulking gun, safety glasses and Hi-temp silicone. Always wear safety glasses during installation to prevent unwanted objects in your eyes. Use properly grounded electrical cords to prevent electrical shock.
2. The door installation kit includes: a 9 ft. Insulation strip, 4-2" long self tapping hex head screws and 2-wooden handles (brass, nickel or black spring handles are available upon request).
3. Remove all parts and protective packing from the door carton. Read and understand all instructions and furnished parts prior to starting the installation.
4. **WARNING!** This door frame must be installed PLUMB!! DO NOT TWIST TO FIT IRREGULAR OPENINGS!! Misalignment of the glass sections and poor door fit will result. Plumb the masonry front with cement or fill the void with insulation. All doors are factory fit on a plumb surface to verify alignment and fit of the doors.
5. Measure the sides of the opening to determine where cement joints exist. Drill the builder flange (using the 7/32 metal bit) at the appropriate joint heights and in ½ inch from the back side of the builder flange. The lowest holes usually are approximately up 8" from the hearth line. Drill the top holes approximately 2" down from the lintel iron.
6. Start the self tapping screws in the holes. Set the door frame in the opening and center left to right. Insert the fiberglass seal between masonry edge and the builder flange. Tighten the screws into the masonry cement. Verify plumb of door frame. Set doors on and replumb if doors are out of alignment. **Tighten all mounting screws evenly.**
7. Screen Mounting: For sliding screens install the screen rods into the bushings located at the top of the inside door opening. Tighten the set screws on the bushings with a 1/8" hex head allen wrench. For the swing style screen, simply install the screen doors into place. The hinges are located on the outer sides of each door. The lower hinge is longer than the top hinge to ease installation.
8. Use Hi-temp silicone to seal the inner perimeter of the builder flange to the fireplace facing if desired, avoiding contact with the outside finished front of doors and frame.
9. If required, place several drops of crazy glue in the handle hole to permanently attach the wood handle to the door latch. The flat non-milled side of handle goes toward the door. Glue contacting the door or frame finish may discolor this finish.

INSTALLERS: Give these instructions to the home owner.

USE AND OPERATION OF YOUR DOOR

1. All fires require air for combustion. Do not burn fires at a smoldering rate as creosote can rapidly accumulate in the chimney. All chimney flues require cleaning, contact a professional chimney sweep to clean and inspect regularly. Excessive creosote, when ignited, will cause a hazardous condition and potentially a chimney fire. **DO NOT USE SCRAPERS**, abrasive cleaners or pads to clean the glass, this will reduce the temper of the glass and result in glass failure. Speedy White glass cleaner available through your dealer works the best.
2. Never burn cardboard or rapidly combustible material. Never allow the flame to contact the glass panels, keep all flame and fire at least 8 inches away from the glass. Always leave the air intake open while in use, this will keep the glass cleaner, allow the air wash to work and keep the flame away from the door.
3. To start a fire, open the fireplace damper (located in the upper smoke shelf area of the fireplace), both fireplace doors and any outside air intake. Use several pieces of newspaper with kindling to start the fire. Add several more pieces of seasoned wood after the kindling has ignited. Close the doors slowly and adjust the room air intake to the proper setting. All fires should be started and maintained by responsible adults. Keep all combustible materials away from the fireplace front.

WARNING THIS FIREPLACE DOOR HAS UNPROTECTED GLASS EDGES. DO NOT CONTACT THE GLASS WITH METAL OBJECTS AS IT MAY CHIP THE GLASS. CAUTION MUST BE USED IN CLEANING THE GLASS AS THIS EDGE MAY BECOME SHARP, RESULTING IN CUTS. CLOSE THE LEFT DOOR SIDE FIRST, OR THE INNER EDGES MAY CONTACT CAUSING CHIPPING OR BREAKAGE. CHILDREN SHOULD NOT OPERATE THE FIREPLACE DOORS.